


Injector Door • Mørenot Fishery
 Cell: +298 280 606 • Tel: +47 70 20 95 00
 Mail: ee@injector-door.eu • ee@mørenot.no • fishery@mørenot.no
 Web: injector-door.eu • mørenot.no

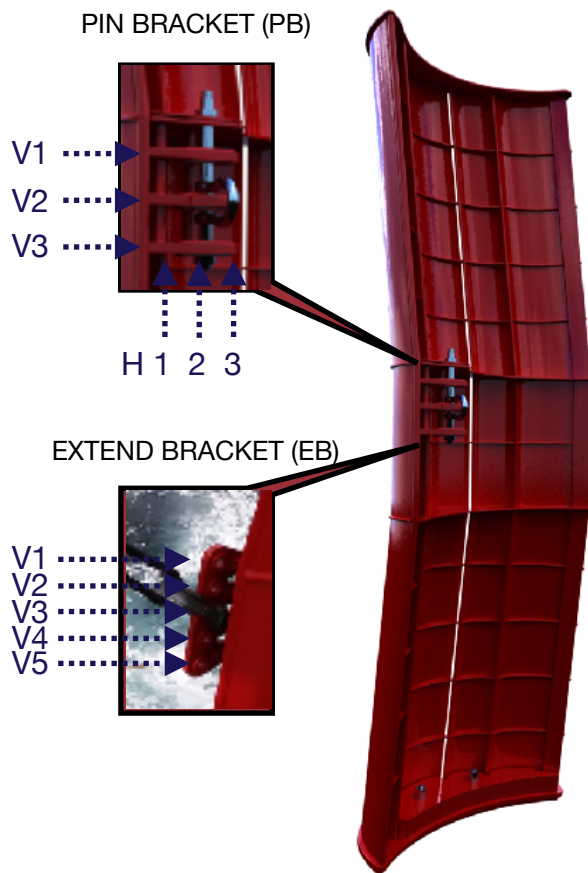

Injector Admiral Manual

Pin Bracket (PB) H 1-2-3: Main horizontal wire AOA adjustments
 Extended Bracket (EB) H 1-2-3: Main horizontal wire AOA adjustments
 Pin Bracket (PB) V 1-2-3: The 3 vertical towing pint point on wire side
 Extended Bracket (EB) V 1-2-3-4-5: The 5 vertical towing pint point on wire side

B1/B2: Top backstop adjustments on back side
 B3/B4: Bottom backstop adjustments on back side

Increase AOA: Connect to a higher no. in point **H** and/or in point **B**
 Reduce AOA: Connect to a lower no. in point **H** and/or in point **B**
(Note: it is NOT advised to use horizontal hole 1 in point B on back together with minimum AOA on front in point H1)

Tilt door inwards: Connect to B1 and B3 or/and V1
 Tilt door outwards: Connect to B2 and B4 or/and PB V3 / EB V5

Tilt door forwards: Bottom backstop (B3/B4) to a higher No. or/and top backstop (B1/B2) to a lower No.
 Tilt door backwards: Top backstop (B1/B2) to a higher No. or/and bottom backstop (B3/B4) to a lower No.



NEUTRAL SETTINGS

Main wire connection in H2 and PB V2 OR EB V3
 Top backstop connection in B1:3
 Bottom backstop connection in B4:3

MINIMUM SETTINGS

Main wire connection in H1
 Top backstop connection in B1:2
 Bottom backstop connection in B4:2

MAXIMUM SETTINGS

Main wire connection H3
 Top backstop connection B1:5
 Bottom backstop connection B4:5

NEUTRAL TILT SETTINGS (example)

B1/B2 in 3 & B3/B4 in 3

TILT DOOR FORWARD (example)

B1/B2 in 1 & B3/B4 in 5

TILT DOOR BACKWARD (example)

B1/B2 in 5 & B3/B4 in 1